

Musical Mushroom Bowl Compatibility Guide

✓ WORKS WITH



Frosted crystal



Clear crystal

Wall thickness: at least 3 mm



Colored crystal

! NOT RECOMMENDED



Very thin-walled crystal bowls
Including Crystal Tones Alchemy series
Exciter weight can dampen vibrations.
Walls thinner than 3 mm

✗ NOT SUPPORTED



Metal Tibetan bowls



Chalice bowls



Gongs

Tall bowls may require elevating the Mushroom for gesture control.




www.musicalmushroom.com/support

Correct Bowl Setup


Seated or standing — keep the sensor path clear.

SEATED

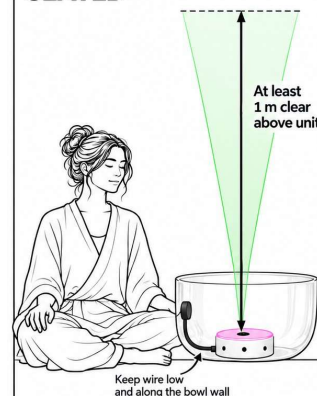

- ✓ Wire outside the beam
- ✓ Body outside the beam
- ✓ Adequate clearance around the bowl (walls, gongs, etc.)

STANDING

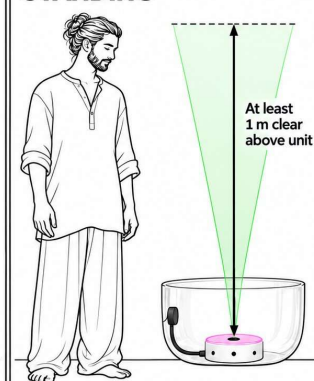

- ✓ Wire outside the beam
- ✓ Body outside the beam
- ✓ Adequate clearance around the bowl (walls, gongs, etc.)

Use a stable surface and keep the upward sensor cone clear.

Stops playing or feels unresponsive?

Check the space above the sensor.

1. Exciter wire in the beam




2. Tall bowl rim



3. Nearby wall



4. Nearby gong rack

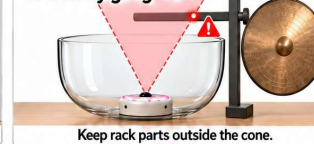

5. Low ceiling or shelf



6. People passing nearby



Anything inside the cone can be detected as a hand.
Keep the sensor's upward path clear.